SMART N SLIM /5



Technical datasheet

NAM-Smart n Slim -DS-EN-G

A true control center, the Smart n' Slim Monitoring Panel manages multiple Security Entrance Lanes, regardless of where the units are located.

The Smart n' Slim Monitoring panel is a flexible command center and allows for visualization, control, and consultation.

TOWER Style server



R'AC'K'mount server



20" TOUCHSCREEN



Access controlled...
Future secured

DESCRIPTION

The Smart n' Slim is available in a TOWER style version and a RACK mount version offering an ideal solution to access the man-machine interface via an existing work station, or simply by connecting the server to a screen and mouse/keyboard. This server can be installed at the guard desk or in a secured closet (preferred location). The centralized server model requires no assembly. The servers are always needed. They are sold as an appliance. The software cannot be installed on the client servers

- Plug & Play installation. The server is shipped preconfigured for easy setup. Only the site specific configuration will need to be done at time of installation.
- 2. The server can be connected to the customer's network for remote access, or can be used on an independent network with the turnstiles.
- **3.** 100-240 VAC / 50-60 Hz power supply cord.
- **4.** User-friendly program for lane management.
- **5.** Password protected access with multiple user access levels

The server can be accessed by any device on the same network as the server (with access to a web browser). That device can be a desktop computer at the guard desk, a laptop or even a Smartphone*. If such a device is not already available in the security office or at the guard desk, we offer a commercial grade **20**" **touch screen** computer that will be preconfigured to automatically connect to the server upon start-up.

- 1. Commercial grade housing and inner components.
- 2. 20-inch color touch screen.
- 3. 100-240 VAC / 50-60 Hz power supply cord.
- **4.** User-friendly program for lane configuration.

In addition to the Monitoring Panel option, customers who want to connect the lanes to a network may wish to purchase the **optional Connectivity Kit**. The connectivity kit consists of a network switch and 50-foot cables. This kit will simplify installation since a single network cable between the array and the customer's network is sufficient to connect all lanes of the same array.

SMART N SLIM

Datasheet

NAM-Smart n Slim-DS-EN-G



STANDARD TECHNICAL CHARACTERISTICS

Power supply	Single phase, 100 – 240 VAC, 50/60 Hz		
Controller/gate interface	Ethernet		
Program languages	English / French		
System requirements for the existing work station connected to the server	 1.6 GHz 1 GB RAM 1024 x 600 display resolution Ethernet interface Web browsers minimum version: Firefox ≥ v7 Internet Explorer ≥ v8 Chrome ≥ v11 Safari ≥ v5 Opera ≥ v11 Netscape ≥ v7 		
Operating temperature	50°F to 95°F (0°C to 35°C)		
Type of equipment managed	 SlimLane 9xx SmartLane 9xx SL 93x (optional IP interface required) PPV 32x (optional IP interface required) 		

	Tower style server	Rack mount Server	Touch Screen	
Display	-	-	20" screen	
Installation	Stand-alone	Stand-alone	Stand-alone	
Weight	15.50 lbs (7.04 kg)	17.86 lbs (8.05 kg)	3.31 lbs (1.7kg)	
Dimensions	16.5" High x 7.5" Wide x 18.3" Deep	Fits in 1U rack: 1.66" High x 19" Wide x 16.9" Deep	12.7" High x 20.0" Wide x 2.6" Deep	

٠,,	- 11		٠.		
Visu	ıalı	72	tι	റ	n
v 100	1011	ᅩ	u	v	

All lanes of the building and status (operating, out-of-service, maintenance)

Specific lane details and status

Alarms (intrusion, fraud) and technical errors

Operating modes (free, controlled, locked) for each lane

Control

Management of visitor access (open for one or more visitors)

Configuration of the operating modes (free, controlled, locked) according to user's needs or schedule (morning, evening, peak hours...)

Emergency opening

Management of user profiles

Consult

Alarm history, technical errors and events

Counters

Usage statistics

Note:


12 arrays of 12 lanes, 50 users max.

For any other configuration that exceed these numbers, a 2nd server would be needed.

Work not included

- Installation
- Ethernet connection to the network
- Connection of each turnstile to the monitoring panel

Sample network configuration

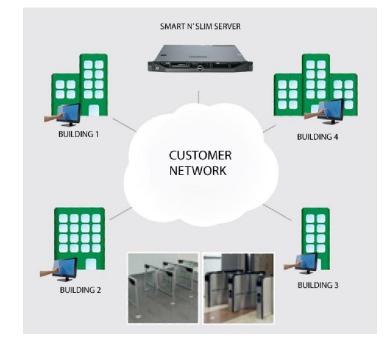

SMART N SLIM

Datasheet

NAM-Smart n Slim-DS-EN-G



