



### Safety notice

The barrier must be inspected frequently to spot all wear, corrosion or crack being able to cause damage, especially if the barrier has an excessive duty service (frequent opening before the end of the closing cycle).

If the barrier is damaged or hit, it must be inspected by competent personnel to spot all damages or cracks.

The barrier and the fence must be cleaned of all ice accumulation or of snow to avoid the load increase.

No object (light, sign etc.) must be added to the barrier.

The fence must not be modified without authorization of Automatic Systems America Inc.

The barrier must be put out of service if cracks appear or if the safety of the people is compromised.

| REV.      | DATE       | MODIFICATIONS/CHANGES                     | PAR/BY  |
|-----------|------------|---|---------|
| E         | 2017/07/06 | ADJUSTMENT OF ARM LENGTH                  | PLA/SSA |
| D         | 2012/08/16 | GENERAL NOTE ADDED AND WALL SPECIFICATION | JPS     |
| REVISIONS |            |   |         |

|  |              |             |
|--|--------------|-------------|
| MATERIAU/MATERIAL  |              |             |
| N/A  |              |             |
| FABRICATION  |              |             |
| N/A  |              |             |
| TRAITEMENT/TREATMENT   |              | FINI/FINISH |
| N/A  |              | N/A         |
| Nb./App.   | POIDS/WEIGHT | SURFACE     |
| -  | - Lbs        | - in2       |
| LES INFORMATIONS CONTENUES SUR LES DESSINS DE ASA Inc. SONT CONFIDENTIELLES ET SONT LA PROPRIÉTÉ DE ASA Inc. TOUTES REPRODUCTIONS, DISTRIBUTIONS OU UTILISATIONS SONT INTERDITES SANS LA PERMISSION ÉCRITE DE ASA Inc. |              |             |
| INFORMATION DISCLOSED HERE IS CONFIDENTIAL AND IS THE PROPERTY OF ASA Inc., ANY REPRODUCTION, DISTRIBUTION OR USE IS PROHIBITED WITHOUT A WRITTEN CONSENT BY ASA Inc.  |              |             |
| SIMILAR PARTS  |              |             |

|   |                        |
|---|------------------------|
| FICHER FILENAME   | NAM-BLG76-IN-06-EN.DWG |
| EBARBER & ENLEVER LES ARÊTES VIVES<br>BREAK ALL SHARP EDGES AND CORNERS |                        |
|   |                        |
| LES DIMENSIONS SONT EN POUÇES. DIMENSIONS ARE IN INCHES                 |                        |
| TOLERANCES  |                        |
| .XXXX   | ± .0005                |
| .XXX  | ± .005                 |
| .XX   | ± .01                  |
| FRACT.  | ± 1/64                 |
| ANGLES  | ± 1/2 °                |
| SAUF SI INDIQUÉS UNLESS OTHERWISE NOTED                                 |                        |



|                           |                              |  |                               |
|---------------------------|------------------------------|--|-------------------------------|
| TITRE                     | BLG76 4.0m LEFT              |  |                               |
| TITRE                     | DIMENSIONS AND SAFETY NOTICE |  |                               |
| DESSINÉ PAR<br>DRAWN BY   | JPS                          | ECHELLE/SCALE<br>N/A                         | DATE<br>2011-04-12            |
| VÉRIFIÉ PAR<br>CHECKED BY | SSA                          | NO. DE DESSIN/DWG. NO.<br>NAM-BLG76-IN-06-EN | FEUILLE/SHEET<br>1 DE/OF<br>1 |
|                           |                              |  | REV. E                        |

### NOTES:

1- AUTOMATIC SYSTEMS RECOMMENDS THAT THE CONCRETE BASE FOR THE BARRIER BE FABRICATED ACCORDING TO DRAWING "1164-2007-2008\_TYPICAL BLG76 CONCRETE BASE". HOWEVER IT IS THE CUSTOMER'S RESPONSIBILITY TO ENSURE THAT THE INSTALLATION CONFORMS TO ALL LOCAL BUILDING CODES.

2- FOR CONDUIT LAYOUT REFER TO NAM-BL5X-BLG76-CONDUITS-IN-EN.