

### Safety notice

Barriers must be inspected frequently to identify and repair worn, corroded or cracked parts. This is especially important when the barrier is frequently required to reopen before the closing cycle is completed.

If the barrier is damaged or hit, it must be inspected by trained personnel able to identify damages including cracks.

The barrier and the fence must be cleaned of all ice accumulation or of snow to avoid the load increase.

No object (light, sign, etc.) must be added to the barrier.

The fence must not be modified without authorization of Automatic Systems America Inc.

The barrier must be put out of service if cracks appear on any part, including the cement base or if the safety of the people is compromised.

### NOTES:

- 1- AUTOMATIC SYSTEMS RECOMMENDS THAT THE CONCRETE BASE FOR THE BARRIER BE FABRICATED ACCORDING TO DRAWING "1164-2003-2004\_TYPICAL BLG77 CONCRETE BASE". HOWEVER IT IS THE CUSTOMER'S RESPONSIBILITY TO ENSURE THAT THE INSTALLATION CONFORMS TO ALL LOCAL BUILDING CODES.
- 2- FOR CONDUIT LAYOUT REFER TO NAM-BLG77-CONDUITS-IN-EN.


AUTOMATIC SYSTEMS MAKES NO REPRESENTATION AS TO THE PROPER POSITIONING OF THE SECURITY ENTRANCE LANES AT THE INSTALLATION LOCATION. ESTABLISHING THE LAYOUT AND PLACEMENT OF THE UNIT(S) AND DETERMINING COMPLIANCE WITH THE APPLICABLE BUILDING CODES, OTHER CODES, LAWS AND REGULATIONS IS THE SOLE RESPONSIBILITY OF THE PURCHASER. INSTALLATION MUST BE PERFORMED BY A QUALIFIED INSTALLER FOLLOWING MANUFACTURER'S INSTRUCTIONS, OTHERWISE AUTOMATIC SYSTEMS' WARRANTIES MAY BE VOID.

| REV       | DATE | MODIFICATIONS/CHANGES | PAR/BY |
|-----------|------|-----------------------|--------|
| -         | -    | -                     | -      |
| REVISIONS |      |                       |        |

|                      |              |         |
|----------------------|--------------|---------|
| MATERIAU/MATERIAL    |              |         |
| TRAITEMENT/TREATMENT |              |         |
| FINI/FINISH          |              |         |
| NB./App.             | POIDS/WEIGHT | SURFACE |

|  |        |
|--|--------|
| LES DIMENSIONS SONT EN<br>POUCES / DIMENSIONS<br>ARE IN INCHES |        |
| TOLERANCES   |        |
| .XXX   | ± .005 |
| .XX  | ± .010 |
| .X   | ± .015 |
| FRAC.  | ± 1/32 |
| ANGLES   | ± 1/2° |
| SAUF SI INDIQUÉS<br>UNLESS OTHERWISE NOTED                     |        |

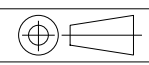
EBARBER & ENLEVER  
LES ARÊTES VIVES.  
DIM SELON ASME Y14.5  
1994. NE PAS MESURER  
SUR LE DESSIN  
BREAK ALL SHARP  
EDGES AND CORNERS.  
ALL DIM PER ASME  
Y14.5 1994. DO NOT  
SCALE DRAWING



FICHER / FILENAME  
NAM-BLG77-IN-44-EN-A-BLG77HLL8x20.dwg

LES INFORMATIONS CONTENUES SUR LES DESSINS DE ASA Inc. SONT CONFIDENTIELLES ET SONT LA PROPRIÉTÉ DE ASA Inc., TOUTES REPRODUCTIONS, DISTRIBUTIONS OU UTILISATIONS SONT INTERDITES SANS LA PERMISSION DE ASA Inc.

INFORMATION DISCLOSED HERE IS CONFIDENTIAL AND IS THE PROPERTY OF ASA Inc., ANY REPRODUCTION, DISTRIBUTION OR USE IS PROHIBITED WITHOUT A WRITTEN CONSENT BY ASA Inc.

|   |               |                           |            |  |
|---|---------------|---------------------------|------------|--|
| TITRE INSTALLATION BLG77HL 8' X 20' LEFT  |               |                           |            |  |
| TITRE DIMENSIONS AND SAFETY NOTICE  |               |                           |            |  |
|  | ECHELLE/SCALE | FORMAT/SIZE               | DATE       | FEUILLE/SHEET                                |
|   | N/A           | B                         | 2020/02/28 | 1  |
| DESSINÉ PAR<br>DRAWN BY   | ZGR           | VÉRIFIÉ PAR<br>CHECKED BY | SSA        | NO. DE DESSIN/DWG. NO.<br>NAM-BLG77-IN-44-EN |
|   |               |                           |            | REV<br>A                                     |